


72-180 Removal and installation of window lift (power window) on driver's door

Door lining removed (72-100)

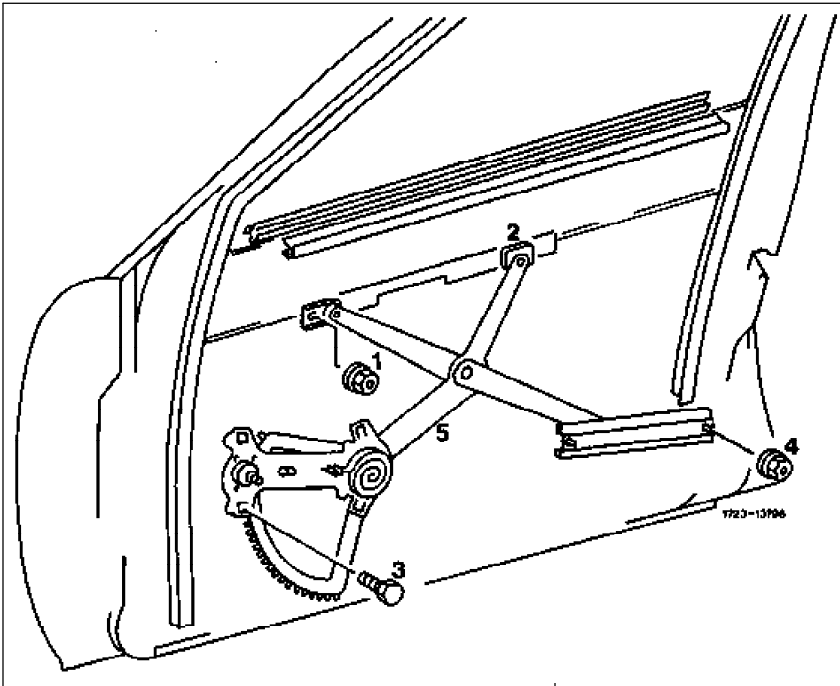

Plastic foil

Nut (1) on window lifting rail

Window

Window

Screw (3)

Nut (4)

Window lift (5)

remove

unscrew - screw in and disconnect window lifting arm (refer to installation note)

lift at the rear and move slide shoes (2) at cutout of window lifting rail out and in

push in upward direction and protect with wedge against falling down

screw 4 each out - in

screw 2 each out - in

remove and install

Adjust crank window prior to mounting door lining (72-195).

Installation note

The screws and nuts for window lift are micro-encapsulated. They must be replaced or screwed in with screw locking compound. If the door foil is damaged during removal, replace foil and carefully glue on.